


HERZThermostat

Temperature Controller with Contact Sensor

Standard Sheet for
7420/7421
Edition 08/04 (08/04)

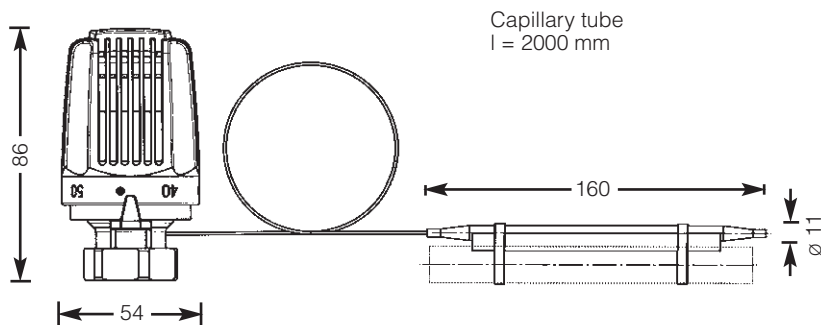

Dimensions in mm

7420/7421

The HERZ-Thermostat with contact sensor is a proportional controller without power requirement for temperature control and/or limitation in hot water circuits and air heaters.

- 7420** HERZ Thermostat with contact sensor for floor heating systems, consisting of a thermostatic head with hydrosensor (liquid filled), capillary tube, pipe contact sensor and fastening material for affixing it to the pipe.
- 7421** HERZ Thermostat with contact sensor for boiler intake temperature control, otherwise same as 7420.

Models

Article number	7420	7421
Handwheel colour	white	white
Order numbers	1 7420 06	1 7421 00
Set value range	20–50 °C	40–70 °C
Maximum differential pressure	0.75 bars 0.2 bars for low-noise operation	
Hysteresis	0.3 K	
Effect of heating medium temperature	0.15 K / 10 K	
Excess temperature safety function	10 K above max. scale value	

**Order Numbers
Operating Data**

For installation on all HERZ valves suitable for thermostatic operation. For article and order numbers, dimensions and forms of delivery see the respective product standard sheets.

Fields of Application

In the HERZ-Thermostat with contact sensor, the change of volume of the hydrosensor liquid filling is transmitted through a capillary tube into a system of bellows which on its part actuates the valve spindle.

The thermostatic valve (control element) is closed when the pipe temperature rises. The temperature scale is directly on the handwheel, temperature adjustment is performed by means of this scale.

Mode of Operation

We reserve the right to make modifications necessitated by technological progress.

HERZ Armaturen
Richard-Strauss-Straße 22 • A-1230 Wien
e-mail: office@herz-armaturen.com • www.herz-armaturen.com



1. BÜ / 11.8.2004 Auftrag-Nr. 1274 / Sabine Haubenwaller HERZ Normblätter
Unsere Korrekturen sind nicht für Druckfarben, Papier- und Druckqualität verbindlich, sondern dienen nur zu Korrekturzwecken!

1. Unscrew screw cap or handwheel from the thermostatic valve body.
2. Open thermostatic head completely, place union nut on the valve. In doing so, turn the thermostatic head in such a way that the handwheel scale can be read easily.
3. Tighten union nut moderately with 30 mm open-end-wrench.
4. Test for proper functioning by turning the handwheel and set the thermostat to the desired temperature.

The contact sensor and its base are attached to the pipe by means of clips; however, it can also be placed in a submersible sleeve.

Flawless heat transmission must be ensured.

Thermostatic Head Installation

Contact Sensor

To prevent theft retaining clips are available that are installed over the fastening nut and which can only be opened with a special key.

Theft Protection


- | | | |
|-----------|--|-----------|
| 1 6616 00 | 2 mm Allen key, for HERZ thermostatic valve heads and theft protection | 1 7552 03 |
| 1 6807 90 | HERZ-TS-90 assembly key | |
| 1 7552 03 | Theft protection, 2 clips that are fastened with Allen screws. Locking and unlocking with key 1 6616 00. | |
| 1 7555 00 | Retaining clips for mounting capillary tubes | |

Accessories

Examples for Application


Floor heating

The mixing valve should be one dimension larger than the thermostatic valve. The pre-adjustable HERZ-DR-T and HERZ-DR valves are an excellent solution.

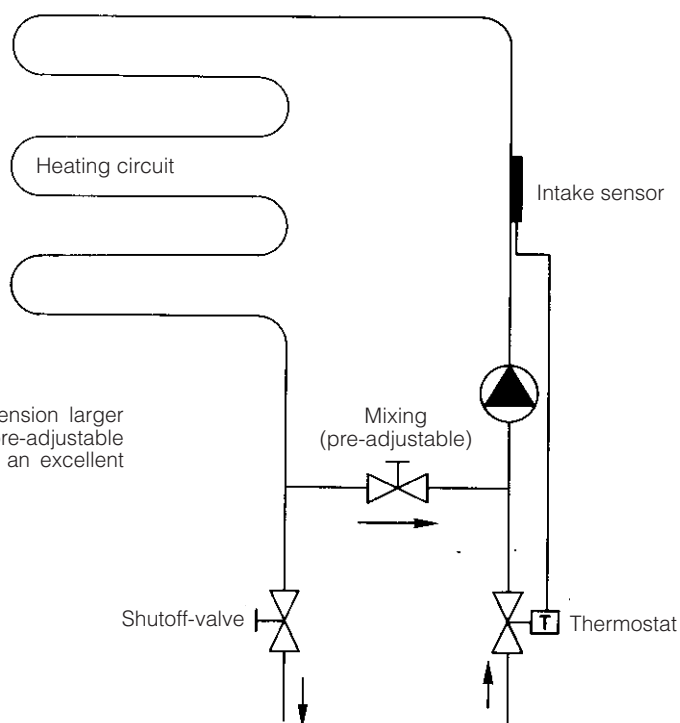

Industrial water heater

The sensor can also be installed in a submersible sleeve.

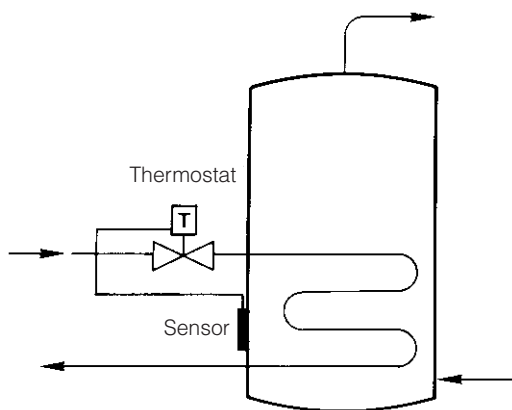

Air heater

